


Flasher System

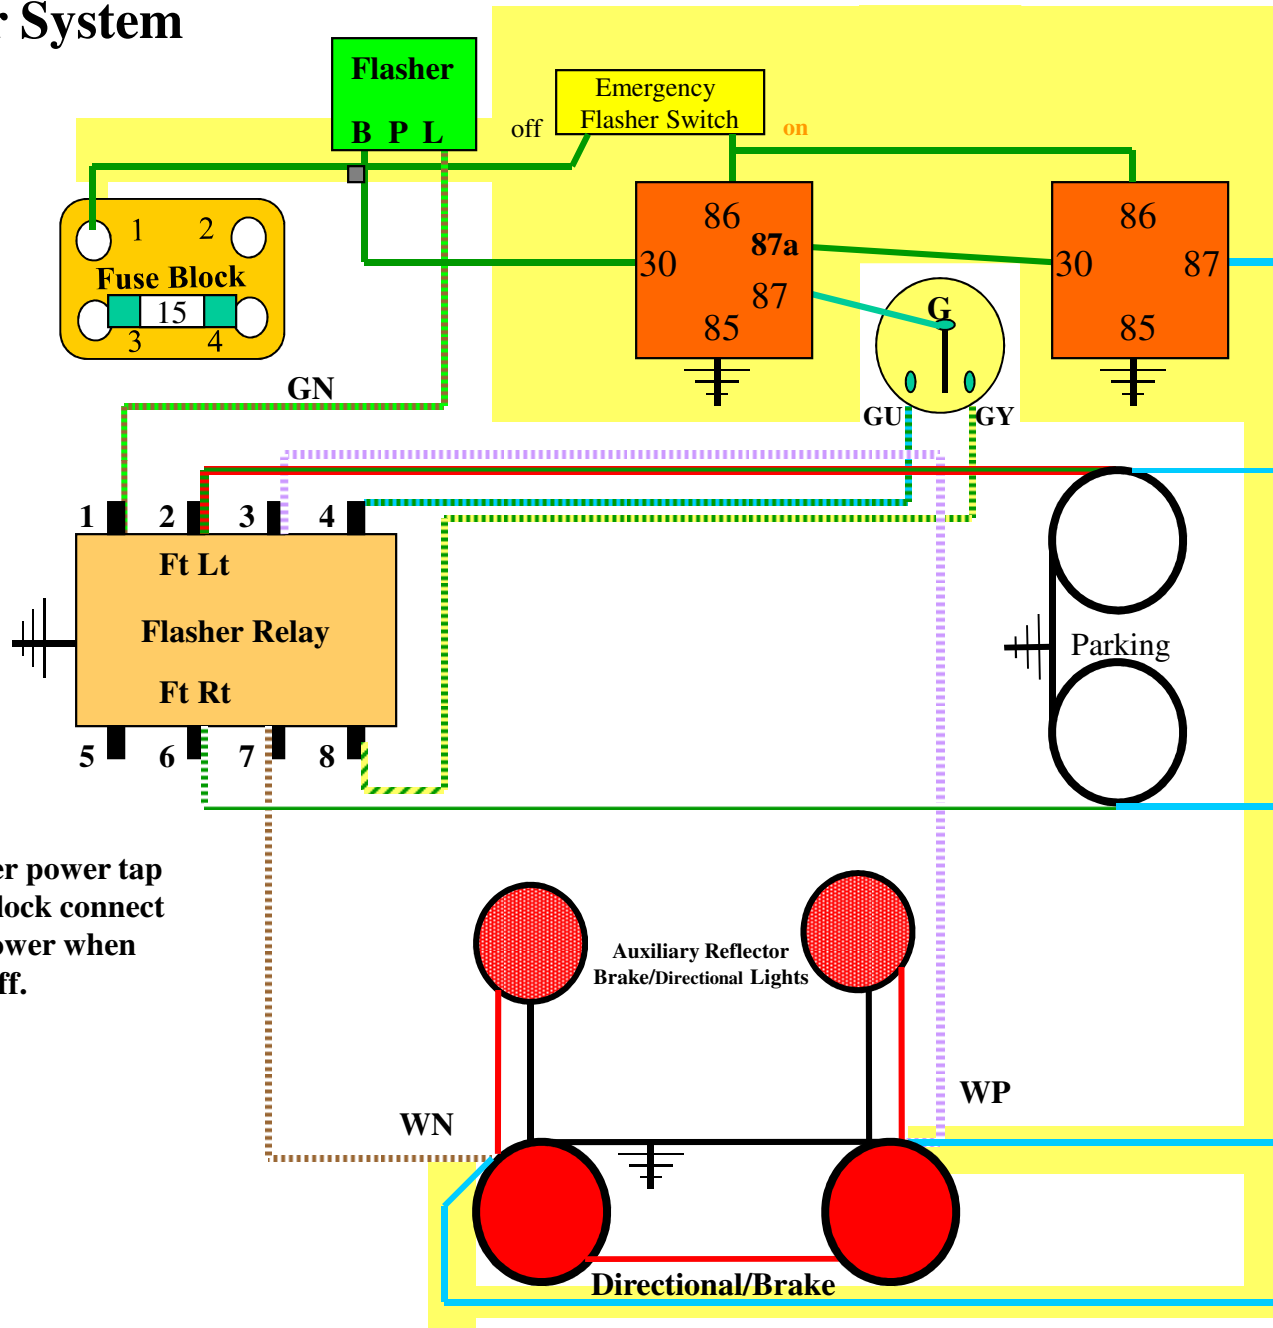

Move flasher power tap from fuse block connect 4 to 1 for power when ignition is off.